




OSVR SteamVR Setup Guide

Please disable Razer Synapse

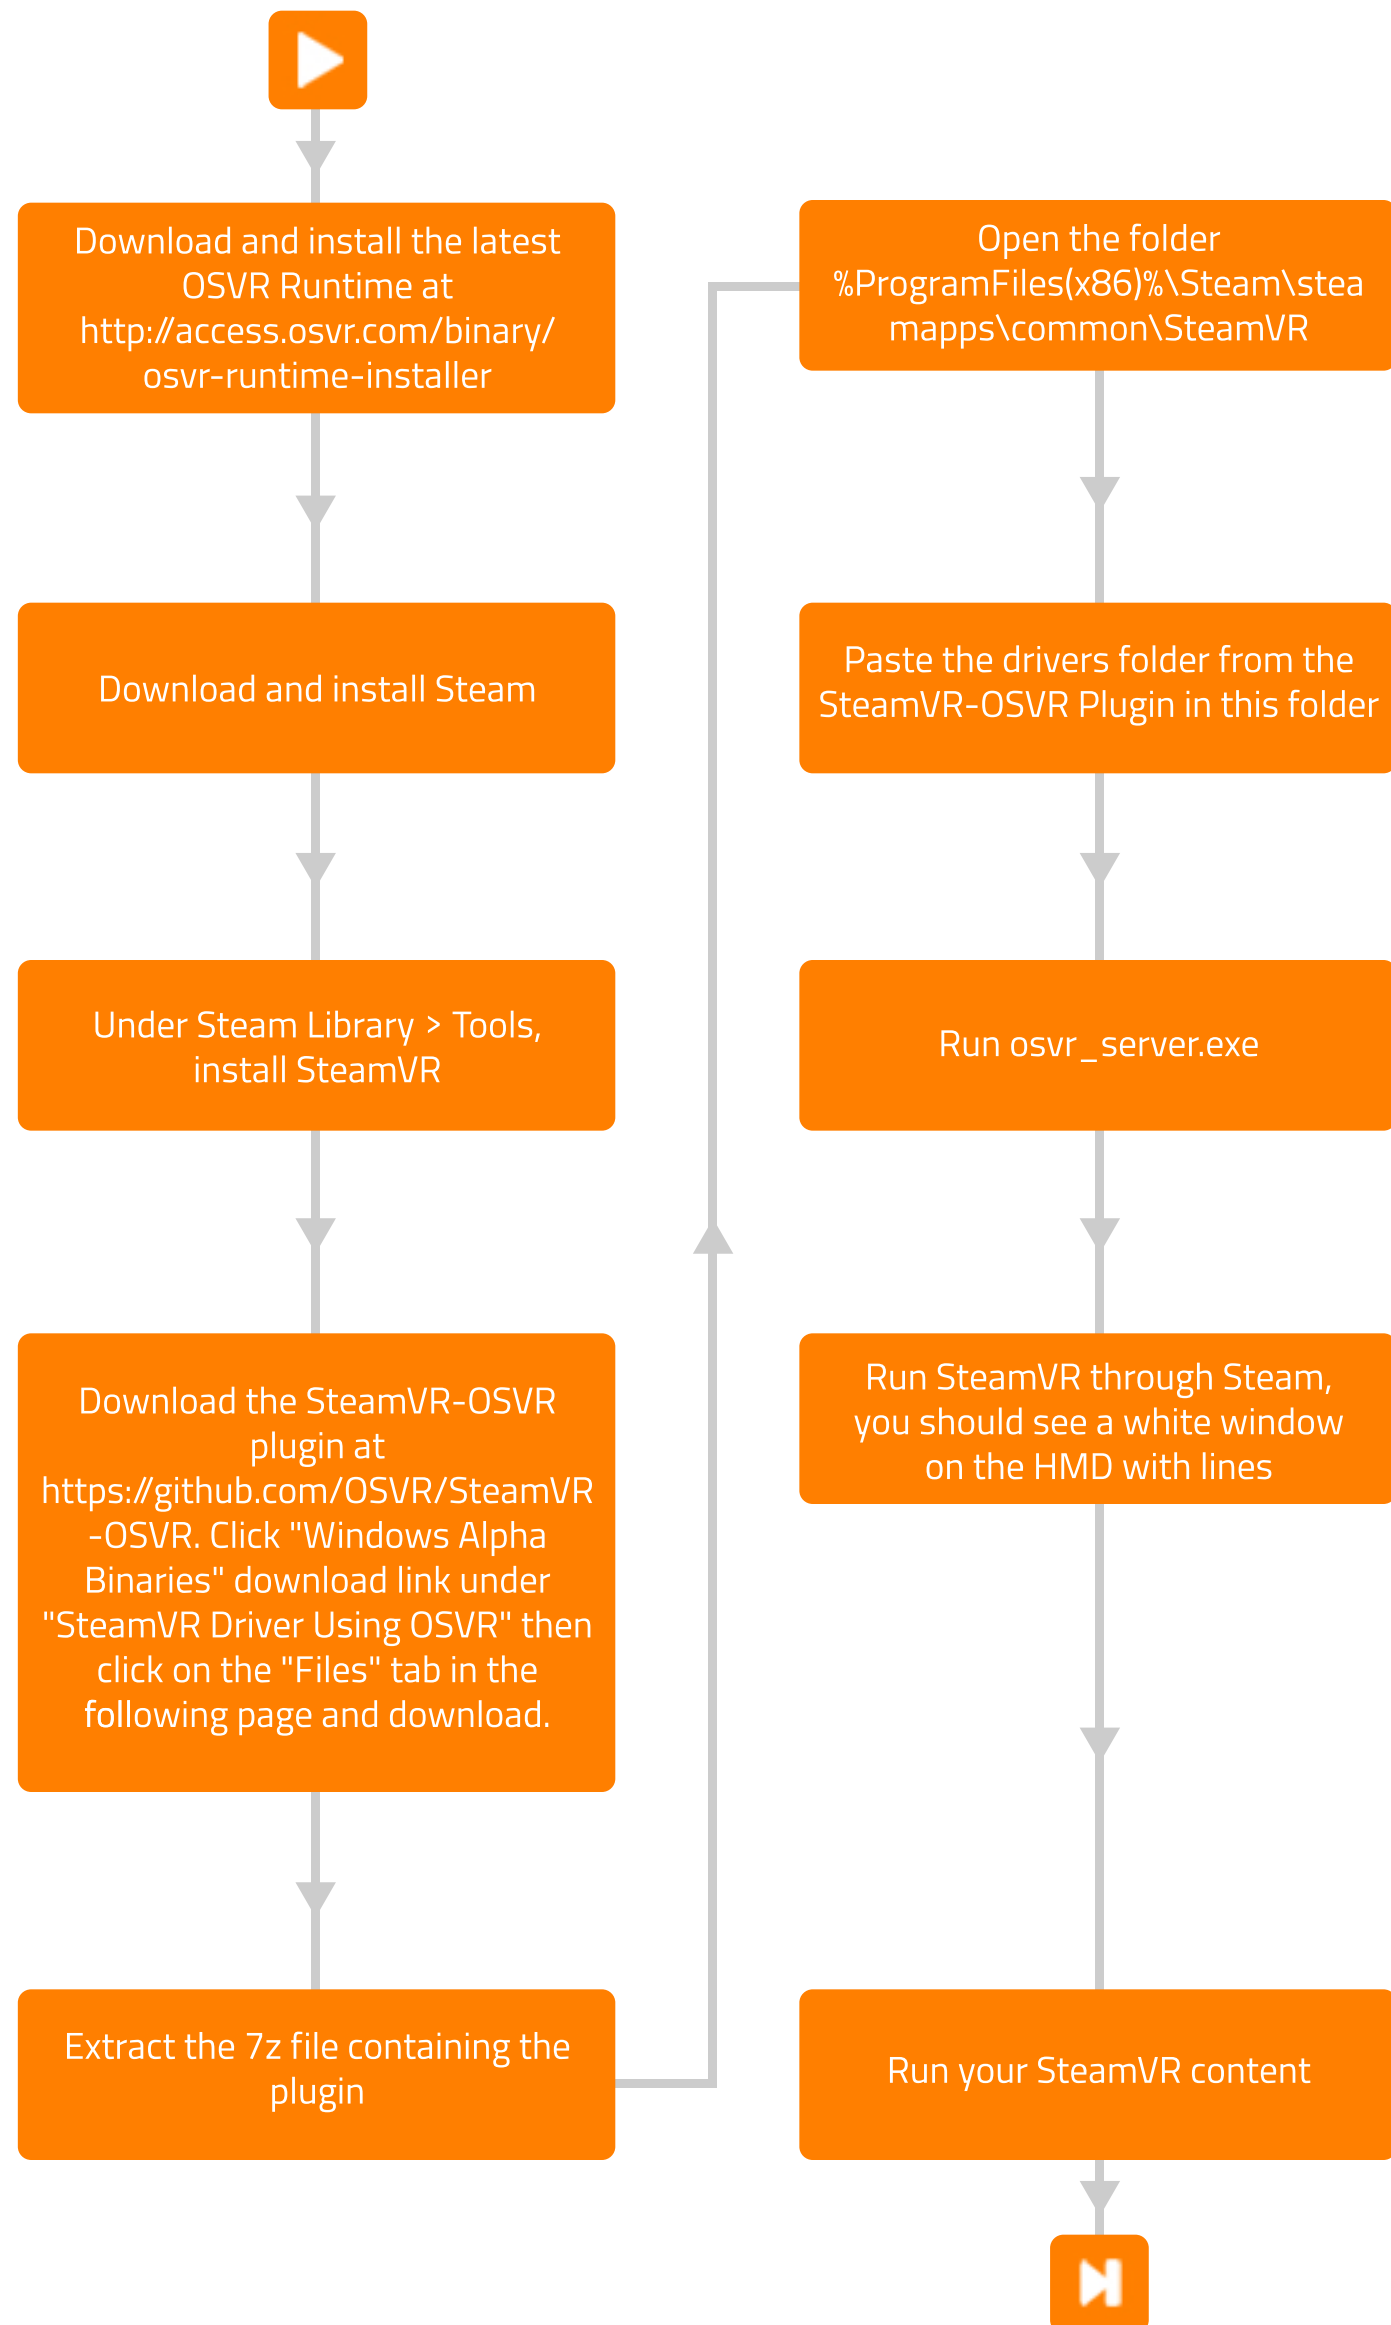

If you are using a GPU that does not support Direct Mode you can disable it by typing "Disable_DirectMode" in the Windows "Run" bar. ("enable_DirectMode" will toggle it on again)